

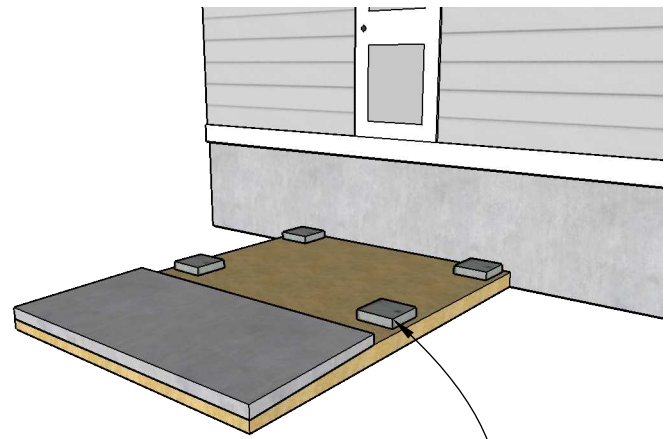


- Base Requirements**
- 1: should be level
 - 2: 2" below walkway/ finish grade
 - 3: 12" wider than precast stair

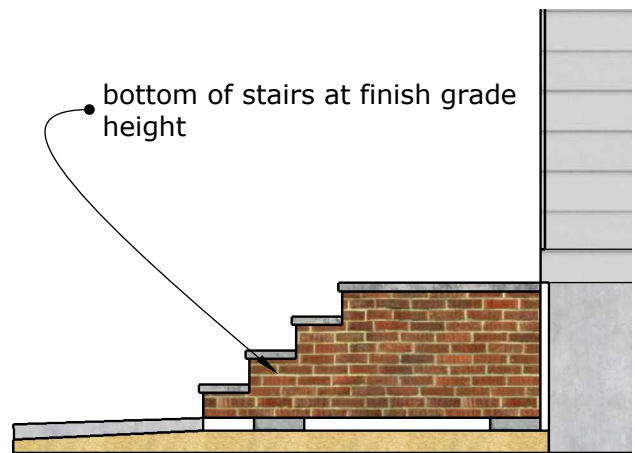

we set pads and or steel brackets to finish height of the bottom of precast.

• stairs installed on pads or steel brackets

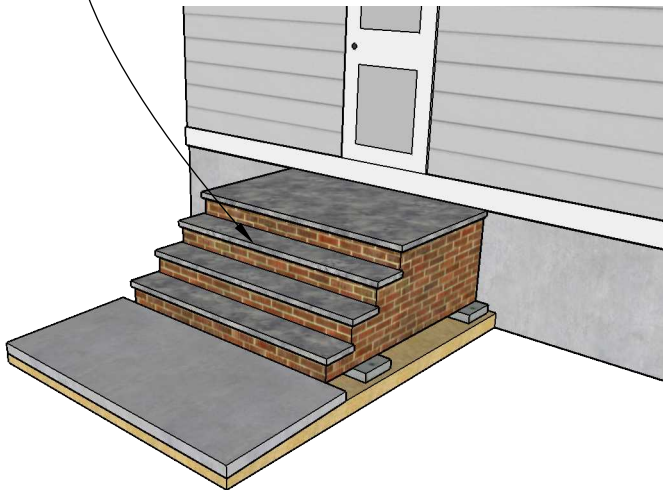

• bottom of stairs at finish grade height



Requirements for stair removal and preparation for precast installation